

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 5,000 LBS. TRAILER WEIGHT & 500 LBS. TONGUE WEIGHT.


DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS.

** FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY**

HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	4	CM-SP108	2.00 X 0.88 X .125 SPACER
2	8	7/16 LOCK WASHER	HELICAL LOCK WASHER
3	4	7/16-14	HEX NUT
4	4	7/16-14 x 1 1/2	CARRIAGE BOLT
5	4	M10 - 1.5 x 40mm	HEX BOLT
6	4	3/8"	WASHER

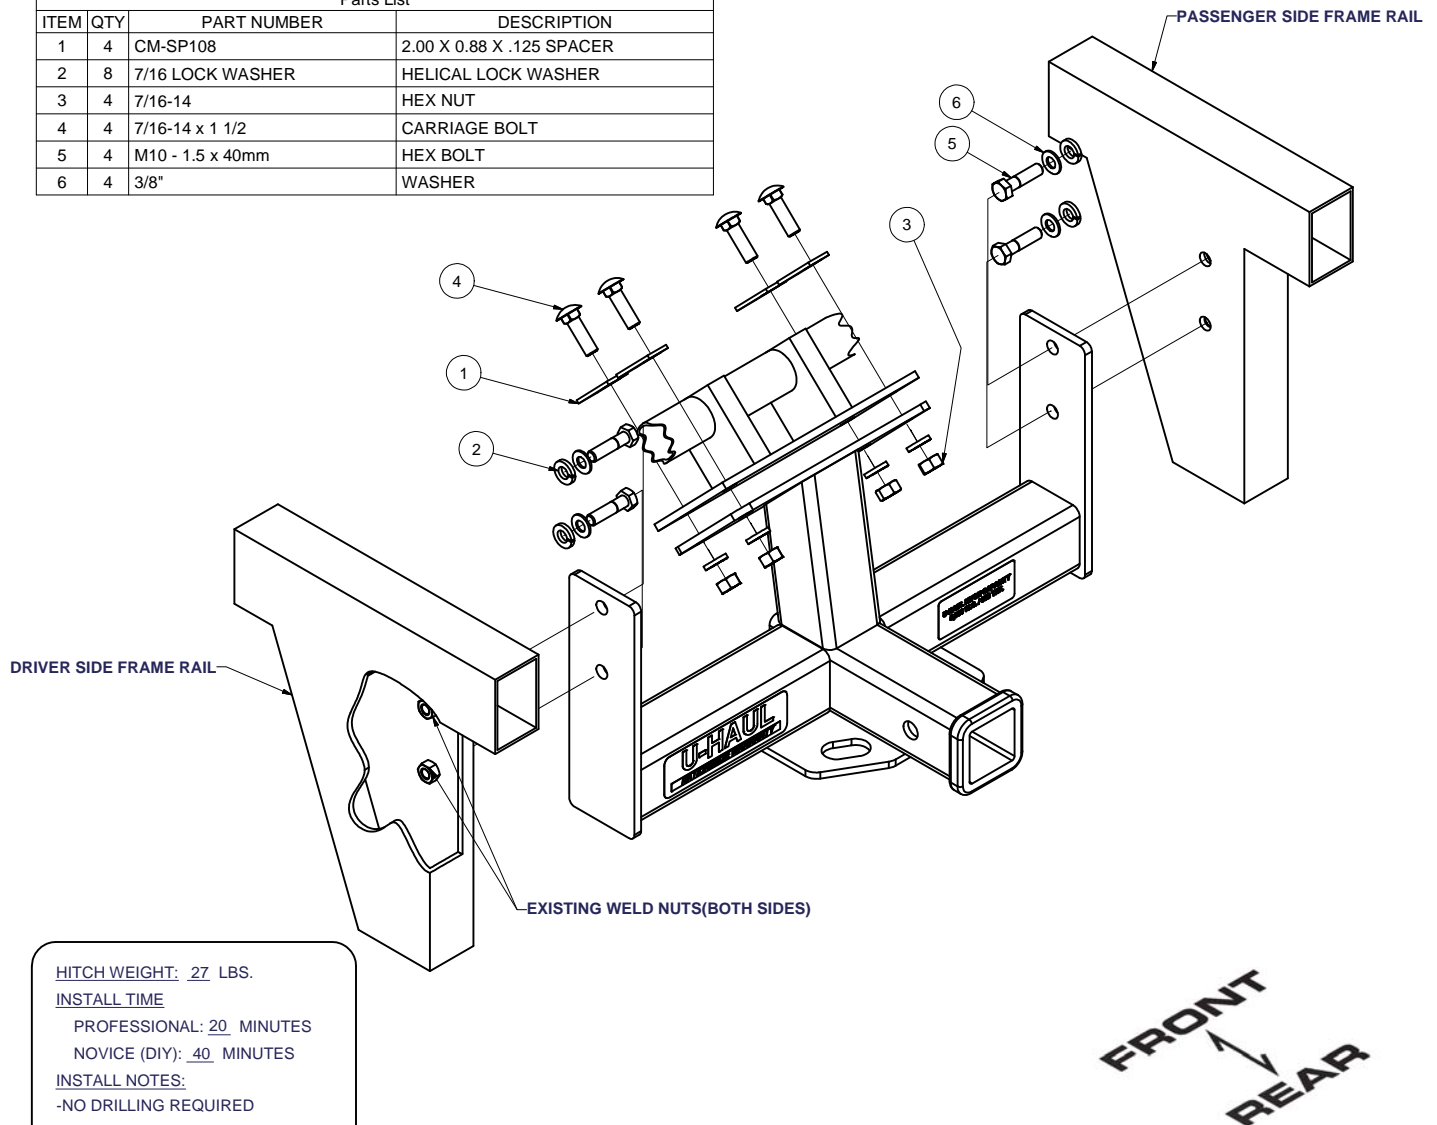

HITCH WEIGHT: 27 LBS.

INSTALL TIME

PROFESSIONAL: 20 MINUTES

NOVICE (DIY): 40 MINUTES

INSTALL NOTES:

-NO DRILLING REQUIRED

INSTALLATION STEPS

1. Locate the tow loop extensions projecting from the driver and passenger side frame rails, and the angled plate on vehicle center as shown.
2. Use fasteners to mount the hitch as shown.
3. Room to wrench fasteners is limited. Wrenching may be easier from the rear of vehicle.
4. Torque 10mm fasteners to 38 lb-ft.
Torque 7/16" carriage bolts to 50 lb-ft.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.