


GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 3,500 LBS. TRAILER WEIGHT & 350 LBS. TONGUE WEIGHT.
*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	CM-438-FW	7/16" FISHWIRE TOOL
2	2	M12-1.25 x 30mm	HEX BOLT
3	2	1/2"	CONICAL TOOTHED WASHER
4	4	CM-SP7	.250 x 1.00 x 2.00" SQUARE HOLE SPACER
5	4	7/16 - 14 x 1 1/2	CARRIAGE BOLT
6	4	7_16-14	HEX LG. FLANGE NUT

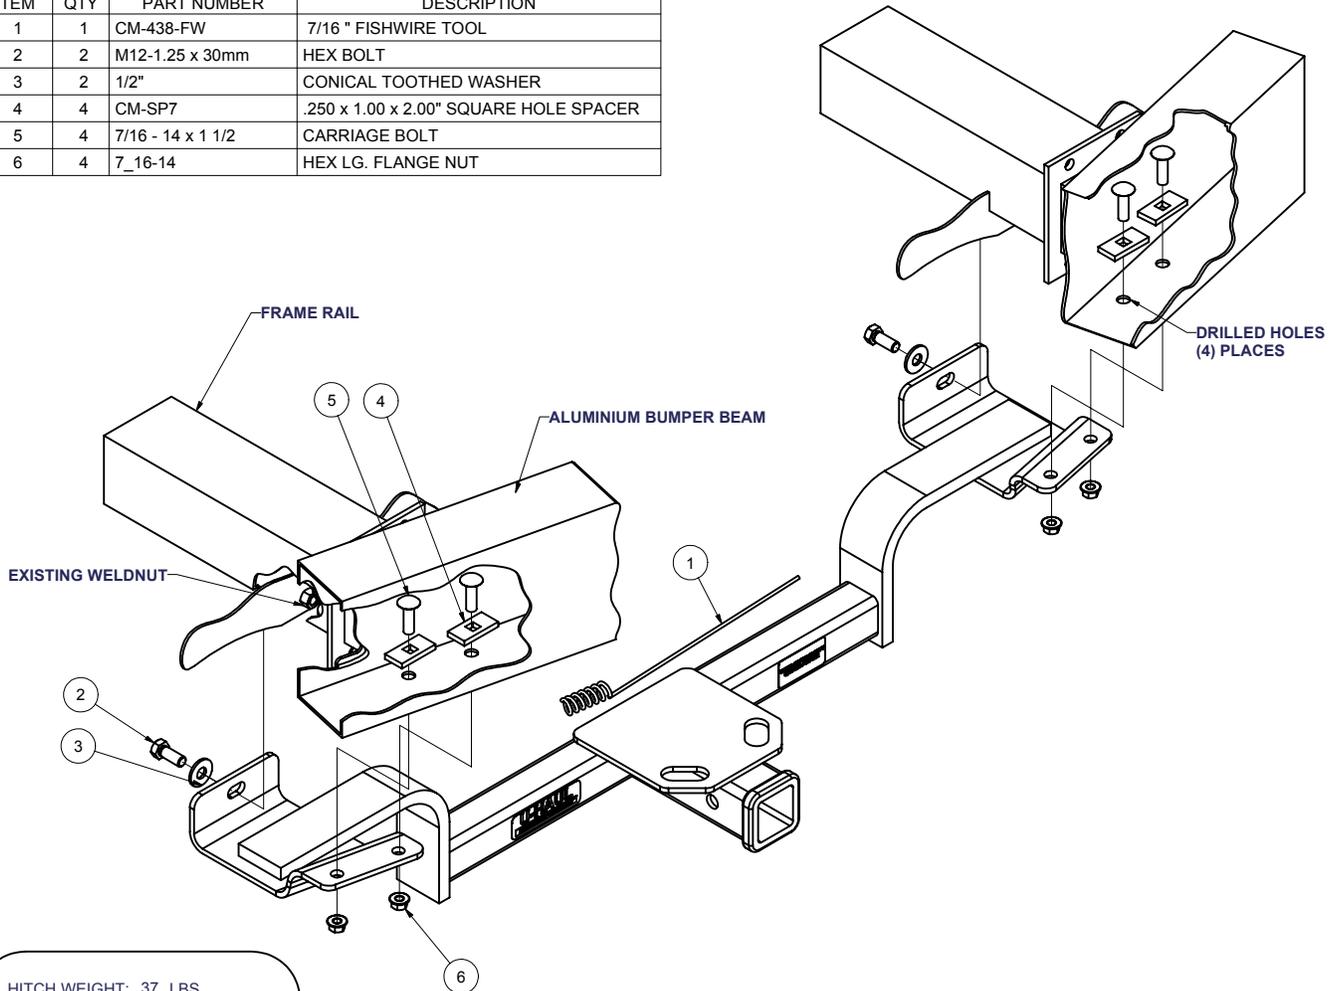

HITCH WEIGHT: 37 LBS.

INSTALL TIME: 45 MINUTES

INSTALL NOTES:

Drilling required, lower exhaust temporarily remove gravel shield.

INSTALLATION STEPS

- 1) Remove left and right gravel shields by removing plastic push pins. **(Note: These will be reinstalled at end of installation.)** Lower exhaust hangers left, right and center.
- 2) Attach hitch to forward side of existing vertical weld nut plate using M12 bolts, each side.
- 3) Pull fascia rearward and drill four places in aluminum bumper beam using hitch as template.
- 4) Fishwire the 7/16" carriage bolts and spacers through open end of bumper into previously drilled holes and fasten with flange nuts.
- 5) Torque 7/16" fasteners to 50 lb.-ft. Torque M12 fasteners to 65 lb.-ft. Reattach exhaust and gravel shields.

PERIODICALLY CHECK THIS RECEIVER HITCH TO INSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.