

INSTALLATION INSTRUCTIONS**MODEL NO. 36133**

WARNING: Although this hitch is designed to safely tow its rated load, we recommend that you consult your vehicle owners manual for possible manufactures recommendations or limitations. Always follow the manufactures installation instructions and always install on the specified vehicle. Before installing hitch, check that the attachment points are in good condition.

Failure to follow these guide lines will void warranty. Any modifications to this hitch will void warranty.

HITCH CAPACITY


3500 LBS. MAXIMUM TRAILER WEIGHT
350 LBS. MAXIMUM TONGUE WEIGHT

Trailer brakes are recommended for towing loads in excess of 1500 lbs.

APPLICATION: 1990-97 Isuzu Rodeo
 1994-97 Honda Passport

PARTS INCLUDE:

- | | | | |
|--|-----|---|-----|
| 1. Receiver Assembly | (1) | 5. 1835-03 1/2-13 x 1-1/4 Hex Bolt GR 5 | (2) |
| 2. 1140-01 12mm x1.25 x 30mm Hex Bolt CL 8.8 | (4) | 6. 1880-03 1/2 Lockwasher | (2) |
| 3. 3730-05 1/2 Conical Washer | (6) | 7. 4442.03 1/2-13 Tab Nut | (2) |
| 4. 1141-02 12mm x 1.25 Hex Nut | (2) | | |

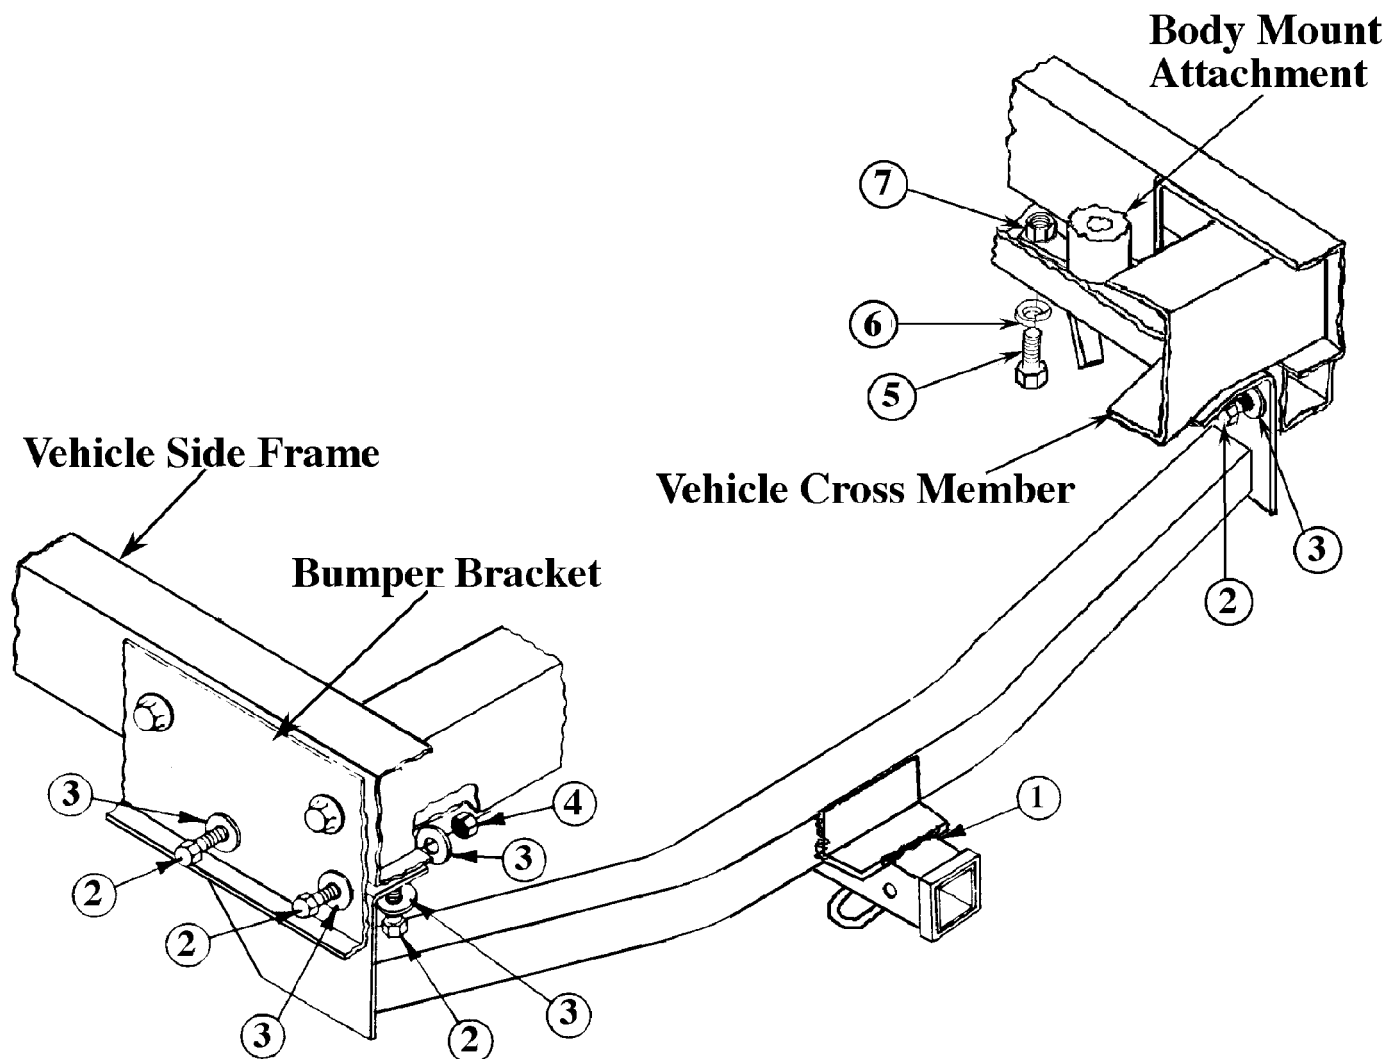

1. Remove the tie down hook, if so equipped, from the extension on the bottom of the right vehicle side frame. Discard the existing 12mm bolts.
2. Position the receiver assembly #1 up against the bottom of the vehicle frame and inner surface of the right frame extension and left bumper bracket.
- 3a. On the left side of the vehicle, attach receiver frame bracket at the two open holes in the bumper bracket with the 12mm bolts, 1/2" conical washers, and 12mm nuts supplied with the kit.
- 3b. On the right side of the vehicle, use two of the 12mm bolts supplied, to attach the frame brackets to the same location where tie down hook was removed in Step 1. Thread these fasteners into the weld nuts in the side of the frame extension.
4. Using the forward hole in each frame bracket as guides, drill a 1/2" diameter hole in the bottom of the plate, near each body mount access hole.
5. Bolt the frame bracket in place by placing the 1/2" tab nut into the body mount access hole and thread the 1/2 x 1-1/4" bolts up through hitch frame bracket and into the tab nuts.
6. Tighten all 12mm bolts and 1/2" bolts to 75 ft. lbs. torque. Failure to tighten bolts as described may result in fastener loss or failure.

NOTE: A ball mount is not supplied with this hitch. Use a 36051 or 36052 ball mount which must be purchased separately.

WARNING: Use this hitch only as a weight carrying hitch. Do not use with any type of weight distributing hitch.

WARNING: Be sure to check hitch pin and hair pin for positive locking placement before towing a trailer

For information regarding this product, or our warranty, contact your dealer or write to "CUSTOMER SERVICE MANAGER" P.O. Box 850, Lodi, CA 95241

NOTE: Some states require a clear view of license plate. Remove ball when not in use if it restricts view.

NOTE: This product complies with regulation V-5, C.S.A Standard D-264 and safety requirements for connecting devices and towing systems of the State of New York.

65040-52