

INSTALLATION INSTRUCTIONS

EQUIPMENT REQUIRED: TIN SNIPS


WIRING ACCESS LOCATION: PC3, PC4

DRILL BITS: 1" HOLE SAW

HITCH REQUIRES 1/2" PIN AND CLIP

WRENCHES: (TIGHTEN ALL FASTENERS WITH TORQUE WRENCH) 10mm, 17mm, 18mm, 11/16

2000 LB MAX GROSS TRAILER WT
200 LB MAX TONGUE WEIGHT
DO NOT EXCEED TOWING VEHICLE RATINGS

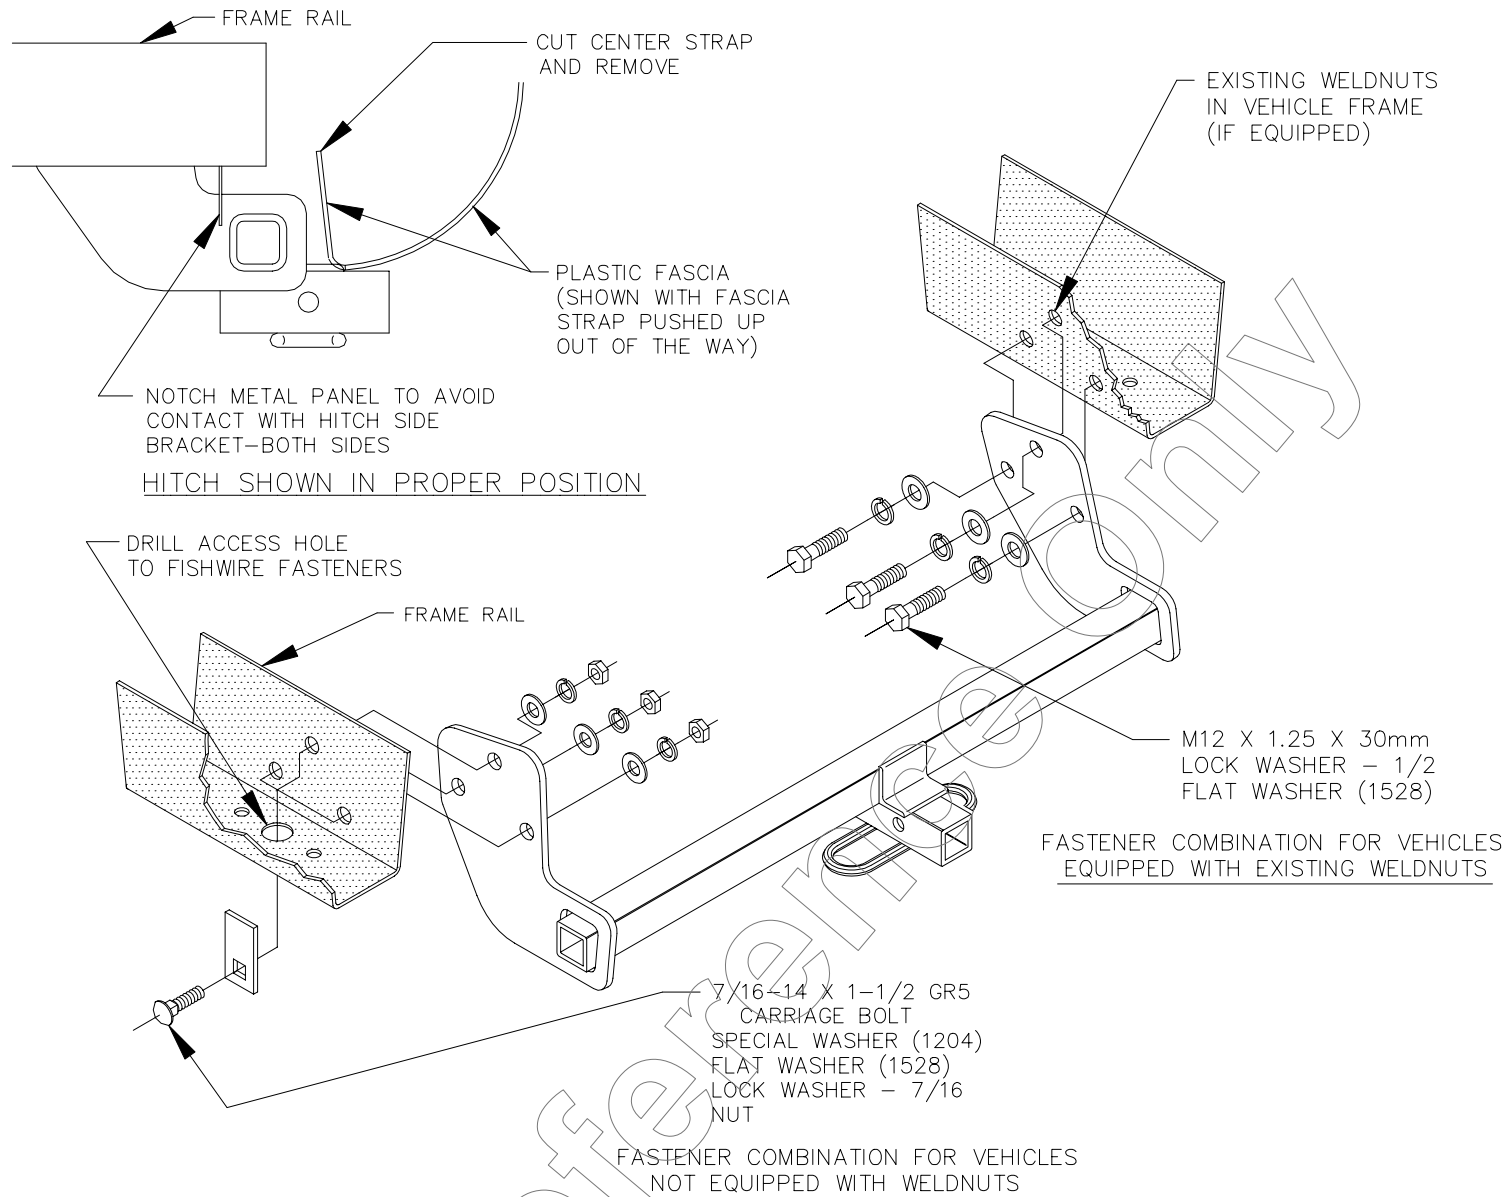

NOTE: INSTALLATION OF HITCH WILL VARY BECAUSE SOME VEHICLES ARE EQUIPPED WITH TOW HOOKS AND/OR WELDNUTS AND SOME VEHICLES ARE NOT EQUIPPED WITH WELDNUTS INSIDE THE FRAME.

- 1A. IF VEHICLE IS EQUIPPED WITH TIE-DOWN BRACKETS AND/OR EXISTING WELDNUTS, REMOVE THE BRACKETS FROM INBOARD SIDE OF THE FRAME RAIL BY REMOVING THREE (3) M12 BOLTS, EACH SIDE. RETURN TIE-DOWN BRACKETS AND BOLTS TO VEHICLE OWNER FOR REINSTALLATION IF HITCH IS REMOVED.
- 1B. IF VEHICLE IS NOT EQUIPPED WITH WELDNUTS, DRILL A 1" DIA. ACCESS HOLE IN THE BOTTOM OF THE FRAME RAIL.
2. REMOVE FASCIA RETAINING BOLTS WHICH FASTEN PLASTIC FASCIA STRAPS TO VEHICLE TRUNK PAN.
3. NOTCH METAL PANEL TO AVOID CONTACT WITH HITCH SIDE BRACKET AS SHOWN ABOVE.
4. RAISE HITCH INTO POSITION SO THAT HITCH CROSSTUBE IS ABOVE PLASTIC FASCIA STRAPS.
5. INSTALL FASTENERS PER VEHICLE CONFIGURATION AS SHOWN ABOVE.
6. REATTACH DRIVER'S SIDE PLASTIC FASCIA STRAP TO TRUNK PAN. WITH PASSENGER'S SIDE FASCIA STRAP PUSHED UP, OUT OF THE WAY, AS SHOWN ABOVE, REINSTALL FASCIA RETAINING BOLT (REMOVED IN STEP 2) INTO WELDNUT IN TRUNK PAN TO PREVENT WATER AND FUMES FROM ENTERING VEHICLE.

TIGHTEN ALL M12 CL8.8 FASTENERS TO 68 LB.-FT.
TIGHTEN ALL 7/16 GR5 FASTENERS TO 50 LB.-FT.

TOYOTA COROLLA ONLY	PRIZM ONLY
USE ONLY THE DRAWBAR SHOWN FOR CORRECT BUMPER CLEARANCE AND HEIGHT.	USE ONLY THE DRAWBAR SHOWN FOR CORRECT BUMPER CLEARANCE AND HEIGHT.
<p>9.75 Length</p> <p>PIN 2210 DT</p> <p>2.75 Rise</p> <p>CLIP 2209 DT</p> <p>DRAWBAR 3597</p>	<p>6.62 Length</p> <p>PIN 2210 DT</p> <p>2.75 Rise</p> <p>CLIP 2209 DT</p> <p>DRAWBAR 3598</p>

USE ONLY THE DRAWBAR SHOWN FOR CORRECT BUMPER CLEARANCE AND HEIGHT.
DRAWBAR MUST BE USED IN THE RISE POSITION ONLY.

THIS PRODUCT COMPLIES WITH SAFETY SPECIFICATIONS AND REQUIREMENTS FOR CONNECTING DEVICES AND TOWING SYSTEMS OF THE STATE OF NEW YORK AND V.E.S.C. REGULATION V-5.

APPROX WEIGHT (LB.)
15.5

FASTENER KIT
01131-044

NOTE: Check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Follow car maker's specs for maximum trailer weight and tongue weight. Do not cut access or attachment holes with a torch.

TOWING PRODUCTS

Canton, Michigan
Elkhart, Indiana