


SPORT FRAME®**INSTALLATION INSTRUCTIONS**


EQUIPMENT REQUIRED: FISHWIRE

DRILL BITS: NONE

WRENCHES: (TIGHTEN ALL FASTENERS WITH TORQUE WRENCH) 7/8

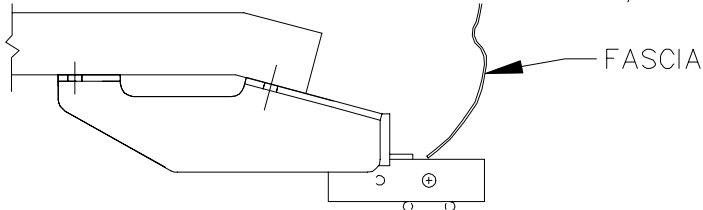

HITCH SHOWN IN PROPER POSITION

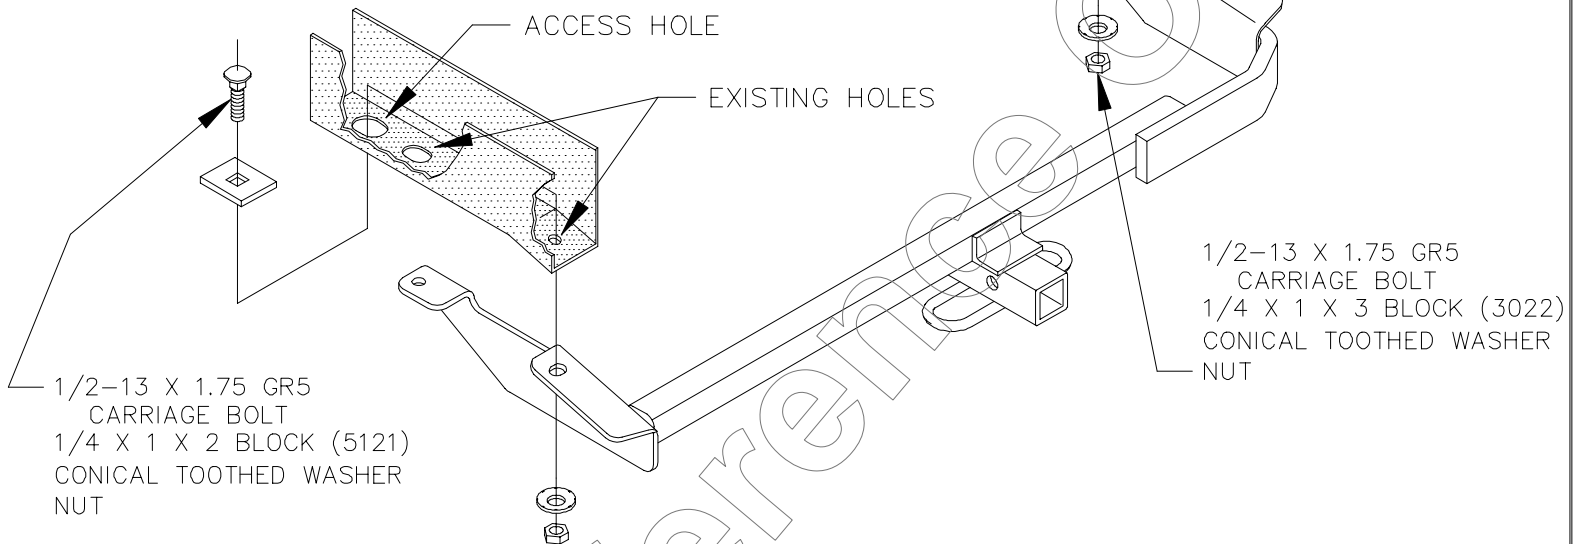

1. FISHWIRE CARRIAGE BOLT AND BLOCK (5121) THROUGH ACCESS HOLE IN FRAME RAIL BOTH SIDES AS SHOWN.
2. FISHWIRE CARRIAGE BOLT AND BLOCK (3022) THROUGH ACCESS HOLE IN FRAME RAIL BOTH SIDES AS SHOWN.
3. RAISE HITCH INTO POSITION AND INSTALL CONICAL TOOTHED WASHERS AND HEX NUTS AS SHOWN.

TIGHTEN ALL 1/2 GR5 FASTENERS TO 75 LB.-FT.

<p>DESIGNED FOR USE WITH PIN 2210 CLIP 2209 DRAWBAR 3598</p>	<p>DRAWBAR REPLACEMENT KIT (INCLUDES PIN & CLIP)</p> <p>3593</p> <p>NOTE: REPLACEMENT DRAWBAR AVAILABLE ONLY IN KIT. PINS & CLIPS AVAILABLE SEPARATELY.</p>
--	--

USE ONLY THE DRAWBAR SHOWN FOR CORRECT BUMPER CLEARANCE AND HEIGHT.
DRAWBAR MUST BE USED IN THE RISE POSITION ONLY.

REMOVE DRAWBAR WHEN NOT TOWING
TO PROTECT DRAWBAR OPENING IN HITCH WHEN NOT TOWING,
INSERT COVER #2211 (PURCHASED SEPARATELY).

THIS PRODUCT COMPLIES WITH SAFETY SPECIFICATIONS AND REQUIREMENTS FOR CONNECTING DEVICES AND TOWING SYSTEMS OF THE STATE OF NEW YORK AND V.E.S.C. REGULATION V-5.

APPROX WEIGHT (LB.)	22	FASTENER KIT NO.	1131-142
---------------------	----	------------------	----------

NOTE: Check hitch frequently, making sure all fasteners and ball are properly tightened. If hitch is removed, plug all holes in trunk pan or other body panels to prevent entry of water and exhaust fumes. A hitch or ball which has been damaged should be removed and replaced. Observe safety precautions when working beneath a vehicle and wear eye protection. Follow car maker's specs for maximum trailer weight and tongue weight. Do not cut access or attachment holes with a torch.