

CATALOG NUMBER.....217250  
 APPLICATION .....Nissan Sentra Sport Coupe,  
 HITCH CAPACITY .....1000 pounds gross trailer weight 100 pounds maximum tongue load  
 OR the maximum load specified by the vehicle manufacturer;  
 WHICHEVER IS LESS.


PLEASE NOTE: This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York and regulation V.E.S.C. V-5.

1. Remove any material from trunk/tire well where fasteners ① will pass. Locate and mark the car's centerline so that hitch can be centered on the rear bumper.
2. Cut away just enough of car's plastic fairing (facia) to clear hitch bracket at ②. Refer to diagram. With hitch in place as shown centered and square with the car, mark and centerpunch bumper for holes ② and trunk floor for holes ①.
3. Drill holes ① for 3/8" diameter screws. Drill holes ② 1/2" diameter.
4. Mount the hitch using fasteners called out at ① and ②. Note instruction at diagram for installing rectangular U-bolt in bumper. 1/2" holes may be worked slightly larger if necessary to get bolt into bumper. Fender washers at ① must be installed inside car OPPOSITE the hitch.
5. Final tighten fasteners as specified on reverse of these instructions. NOTE: DO NOT USE IMPACT WRENCH ON U-BOLTS. Recheck all fasteners occasionally for tightness.

#### FASTENERS:

- |                          |   |
|--------------------------|---|
| ① (4) 3/8 x 1 1/4" screw | ② (1) 7/16 x 4 3/4" rectangular U-bolt (#118) |
| (4) 3/8" fender washer   | (2) 7/16" lock washer                         |
| (4) 3/8" lock washer     | (2) 7/16" hex nut                             |
| (4) 3/8" hex nut         |   |

#### U-BOLT

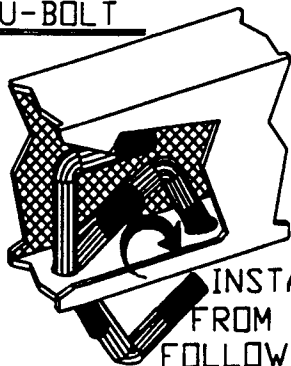

INSTALL  
FROM OUTSIDE,  
FOLLOW DIRECTION  
OF ARROW.

